

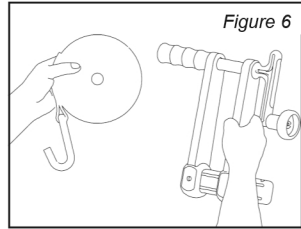
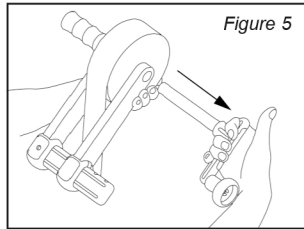
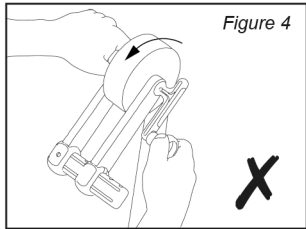
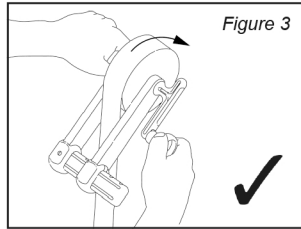


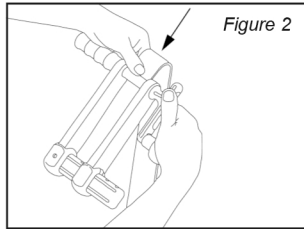

# Instructions

This product has been designed to rewind most ratchet straps of various widths ranging from 1" to 4" for storage after use.

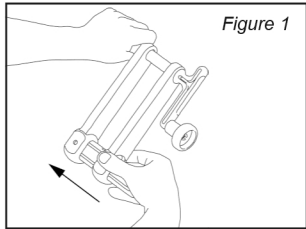

1. Adjust strap winder guide width to suit strap being wound by sliding guide fork as shown in *Figure 1*.

2. Insert end of strap through slot as shown in *Figure 2*, whilst supporting base of strap winder against hip.

3. Wind handle in direction so as to draw the strap up between the guides as shown in *Figure 3*, not as in *Figure 4*. Support the strap between thumb and index finger for first few winds.



4. When fully wound, extract

the winding handle to release the wound strap as shown in *Figure 5*.

5. Remove strap from winder for storage and replace winding handle back into strap winder ready for next use, *Figure 6*.

## Winding straps by the hook attachment

1. Partially extract winding handle, mount the hook attachment onto the winding shaft between the guides and re-insert the winding handle, see *Figure A*.
2. Adjust the strap winder to accommodate strap hook between the guides as shown in *Figure 1*.
3. Attach hook as shown in *Figure B* and wind strap.
4. When fully wound, extract the winding handle to release the wound strap as shown in *Figure 5*. Collect attachment from centre of strap and replace ready for next use.

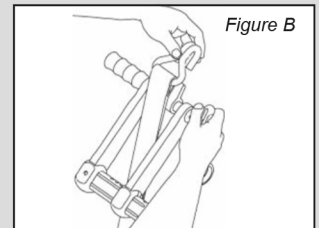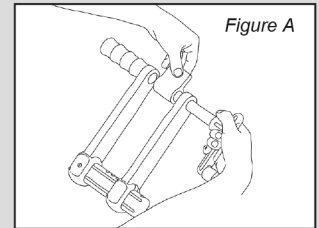

This is a Zyonyx product, designed and manufactured in the UK. Patent No.GB2459552  
EC Registered Design No.001059372-0002. For further details please visit [WWW.ZYONYX.CO.UK](http://WWW.ZYONYX.CO.UK)

Other products by Zyonyx



mini ratchet strap winder